

# RE160 Cold wire feeder



On the control card are present all the functions necessary to a cold wire feeder:

- Start stop input.
- Adjustable delay time of start.
- Adjustable delay time of stop.
- Adjustable forward and reverse speed.
- Adjustable time to reverse speed.
- Timer with separate regulation of run-pause time.

